

# Your TiVo Remote Control

**Start here!** Press once to get to **TiVo Central**, the main menu for all TiVo features & settings.

**Arrows** navigate through TiVo menus and program guide. Press **Select** to choose an option.

**Thumbs Up/Thumbs Down** rate shows for TiVo Suggestions.

**Replay** repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

**On Demand** takes you to the main screen for On Demand options.

**Buttons B & C** come in handy when sorting and filtering your OnePass folder. With **B** you can sort by season, date or newest to oldest. With **C** you can cycle through different views of the episodes with your OnePass.

**Live TV** takes you to Live TV.

**Guide** takes you to the program guide.


Press **Record** to start or stop recording the show you're watching.

**On Demand & DVR Controls:** You can Play, Fast Forward, Slow, Rewind and Pause.

**Advance** moves forward in 30 second increments; press and hold to jump to the end of the show.

**Enter/Last** returns you to the last channel tuned to in Live TV.

**Clear** lets you quickly delete shows.

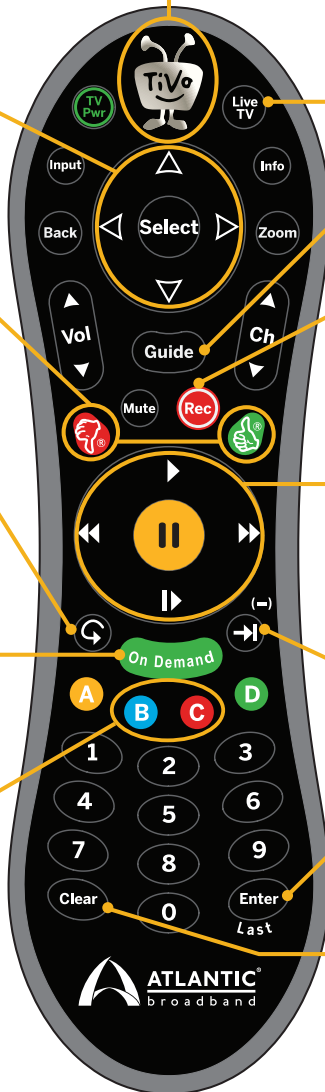

Your remote may vary slightly from the one pictured here, but the basic functions should remain the same. Some features may not be available in all areas.